



Fujifilm FinePix XP80 Lens Replacement

The lens on your camera is how it captures your images. If it's not working properly, use this guide to switch it out.

Written By: Amanda Lewis





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Open the side panel, housing the battery compartment, by pressing the center button down and twisting the dial.

Step 2



- Release the battery from its secured position by pulling the orange tab back. The battery can then be removed from its compartment.

Step 3 — Exterior Case



- Locate and remove the screws (2mm, 5 each) on the bottom of the camera, using PH000 Phillip hex head bit.

Step 4




- Located and remove the screws (2mm, 2 each) from the top of the camera, using H1.3 hex head bit.

Step 5



- Locate and remove the screws (2mm, 2 each) on the side of the camera, using H1.3 hex head bit.

Step 6

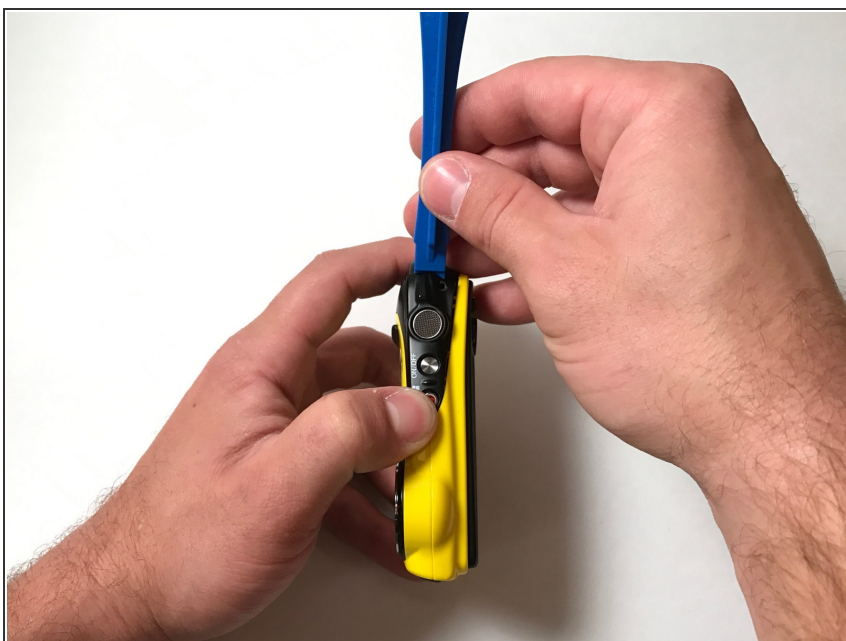

- Using a plastic opening tool, gently start to pry the button case, located at the top of the camera, so it unclips.

Step 7



- Continue to the side of the camera to gently pry the side area of the case apart.

Step 8



- Continue to the bottom of the camera and gently pry the case apart.

Step 9



- It is now safe to remove the yellow front panel. While using your plastic opening tool, gently pry the front panel away from the camera.
- Once the front is removed, the yellow back panel can be taken off with just your hands.

Step 10 — Interior Case



- On the front of the camera, using the H1.3 hex head bit, remove the four screws shown.

Step 11



- Continue to the back of the camera, using the H1.3 hex head bit, and remove the screw shown.

Step 12




- Open the side of the camera, where the battery is housed.
- Using your plastic tool, carefully pry the two clips shown to separate the case.

Step 13




- Unclip the front interior panel from the top, bottom and side of the camera.

Step 14

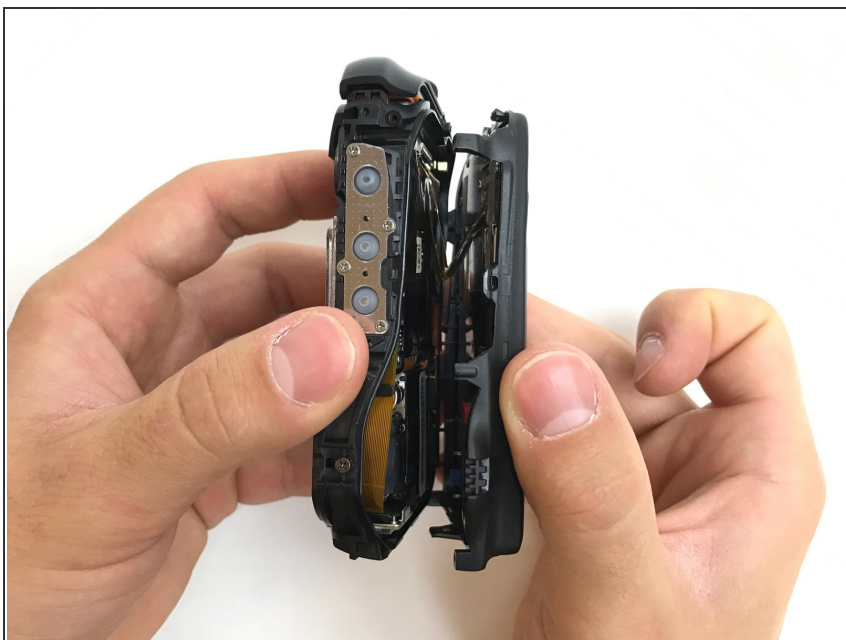

- Gently open the camera, taking care of the major data lines connecting the motherboard to the LCD screen.

Step 15 — Lens

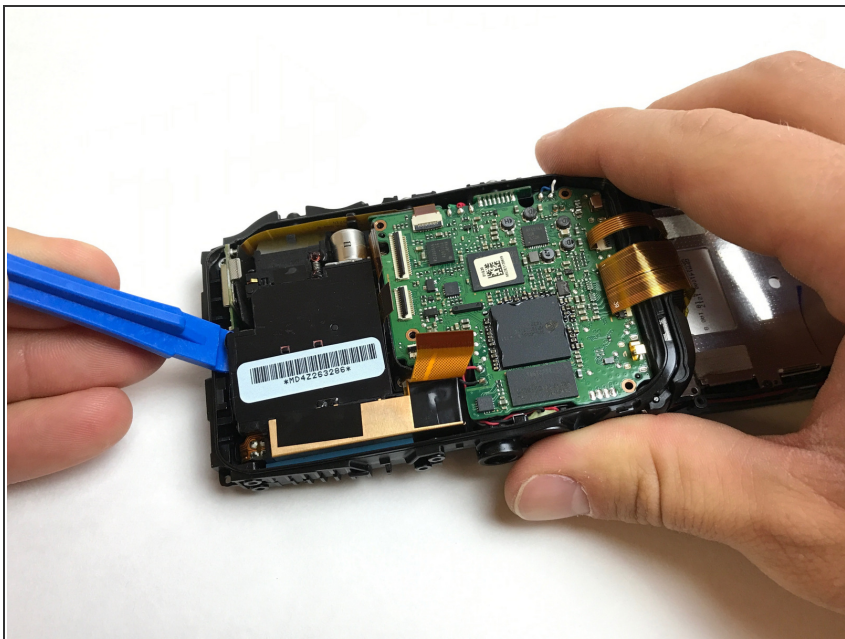

- Once the very inside of your camera is exposed, remove the entire lens housing using a plastic opening tool, which is replaced as one unit.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 07:34:27 AM.